



IQOS ORIGINALS ONE™



Charging and Cleaning

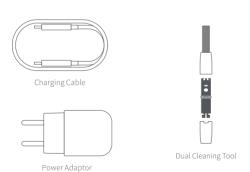

^{*} IQOS ORIGINALS ONE™ is compatible only with HEETS™ tobacco sticks.



For the full user guide, Customer Care and Extended support services for IQOS users, visit

www.igos.com/myigos

FEATURES AND SETTINGS

Personalize your IQOS experience with the IQOS app*.

Please access by scanning the QR code or log in on www.iqos.com/originals and follow the instructions


 IQOS app may not be available in your country. IQOS app is only available with device Model M0007

Getting Started



TURN ON

Press and hold Button for 4 seconds, then release; Status Lights will turn on slowly.




CHARGE

Before first use, fully charge your IQOS ORIGINALS ONE™ with Power Adaptor and Charging Cable.


(approx. 90 min)

How to use your IQOS ORIGINALS ONE™



OPEN

Slide to open.



1. INSERT HEETS™ TOBACCO STICK

Insert the HEETS™ tobacco stick to the line on filter with filter facing outside.

How to use your IQOS ORIGINALS ONE™




2. START HEATING

Press Button until IQOS ORIGINALS ONE™ vibrates and Status Light(s) pulse(s).



3. BEGIN USE

Start using once IQOS ORIGINALS ONE™ vibrates and Status Light(s) stay fixed.



EXPERIENCE COUNTDOWN


During use Status Light(s) indicate the remaining time.



4. NEARLY COMPLETE

To signal the last 30 seconds or last 2 puffs, IQOS ORIGINALS ONE™ will vibrate once with one Light pulsing white.


How to use your IQOS ORIGINALS ONE™



5. REMOVE HEETS™ TOBACCO STICK

Slide Cap upwards and then remove used HEETS™ tobacco stick.


How to Clean



REMOVE CAP


When device is cool, slide Cap upwards and remove completely.

How to Clean



ROTATING HEAD

Insert the Rotating Head of the Dual Cleaning Tool and **rotate** gently.



SWEEPING HEAD

Insert the Sweeping Head of the Dual Cleaning Tool and gently move it sideways from **left to right**.


Clean daily for optimal experience.

Quick Tips



BATTERY STATUS


Short press Button, Status Lights will turn on to indicate battery level.



LIGHT BLINKS YELLOW


Battery depleted, need to charge.

Quick Tips



LIGHTS BLINK WHITE TWICEIQOS ORIGINALS ONE™ is

outside operating temperature range (0°C/<40°C).



LIGHT BLINKS RED

Reset IQOS ORIGINALS ONE™. If red light blinking persists, contact Customer Care.



TO RESET

Press Button for 10 seconds then release. All Status Lights will turn OFF and turn ON, to confirm a RESET.





SAFETY WARNINGS AND INSTRUCTIONS

PLEASE READ ALL SAFETY WARNINGS AND INSTRUCTIONS BEFORE USE TO AVOID INJURY.

These safety warnings and instructions cannot cover all possible conditions that could occur and users should exercise care and caution.

KEEP THESE SAFETY WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE AS THEY CONTAIN IMPORTANT INFORMATION.

Intended Users

- IQOS ORIGINALS ONE™ and HEETS™ are for adult-use only.
- IQOS ORIGINALS ONE™ and HEETS™ are intended for use by current adult smokers who would otherwise continue to smoke.
- Children and adolescents should never use IQOS ORIGINALS ONE™ or HEETS™ under any
 circumstances
- IQOS ORIGINALS ONE™ or HEETS™ should not be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning their use and understand the risks invalued.

Tobacco and Nicotine

- HEETS™ contain nicotine, which is addictive.
- IQOS ORIGINALS ONE™ and HEETS™ are not risk-free. The best way to reduce tobaccorelated health risks is to quit tobacco and nicotine use altogether.
- Some users of IQOS ORIGINALS ONE™ and HEETS™ reported experiencing abdominal pain, chest pain, choking sensation, cough, difficulty breathing, dizziness, dry mouth, dry throat, gingivitis, headache, malaise, nasal stuffiness, nausea, mouth irritation, palpitations, throat irritation, and vamiting
- Nicotine-containing products should not be used by people who have or are at risk of heart disease, are diabetic, are epileptic, or are experiencing seizures.
- Nicatine-containing products should not be used during pregnancy or while breastfeeding. If you are pregnant, breast-feeding, or think you may be pregnant, you should auit to bacco and nicatine use altoaether.
- Stopping smoking or switching to IQOS ORIGINALS ONE™ and HEETS™ or other nicotinecontaining products may require the adjustment of the dosing of certain medicines (e.g. theophylline, clozopine, ropinirole).
- If you have questions about whether you should use IQOS ORIGINALS ONE™ and HEETS™ given an existing health condition, consult a health care professional.

▲ IMPORTANT SAFETY INFORMATION

▲ WARNING Choking and Ingestion Hazard

- Keep IQOS ORIGINALS ONE™ and HEETS™ out of reach of children at all times.
- CHOKING HAZARD IQOS ORIGINALS ONE™ device, accessories and HEETS™ contain small parts.
- INGESTION HAZARD If a HEETS™ is swallowed, seek medical attention immediately due
 to risk of nicotine intoxication.

▲ WARNING Electronic and Battery Hazards

Electrical Risks

Failure to follow these Safety Warnings and Instructions could result in fire, explosion, electric shock, injury, or damage to the product or other property:

- . Only Intended Users should use IQOS ORIGINALS ONE™.
- Only charge the IQOS ORIGINALS ONE™ with the approved IQOS ORIGINALS ONE™ model supplied in the box or available from your local or online IQOS™ stores for charging purposes. See the Technical Data section of this User Guide for a list of approved IQOS ORIGINALS ONE™ models.
 - Do not use third-party accessories with IQOS ORIGINALS ONE™.
- Only charge the IQOS ORIGINALS ONE™ using Safety Extra Low Voltage. See the Technical Data section of this User Guide for details on voltage.
- Do not use IQOS ORIGINALS ONE™ where the use of electronic devices is prohibited.
- Only charge the IQOS ORIGINALS ONE™ indoors as indicated by the symbol △.
- Do not use IQOS ORIGINALS ONE™ or charge the IQOS ORIGINALS ONE™ and/or IQOS ORIGINALS ONE™ accessories if they are damaged, tampered, or broken.

- . Do not use IQOS ORIGINALS ONE™ if its batteries appear to be leaking.
- . Do not use, charge, or store IQOS ORIGINALS ONE™ in places with high temperature (such as inside a car in summer, or near heat sources such as radiators or fireplaces).
- . Do not use IQOS ORIGINALS ONE™ where flammable materials, liquids and gases are present.
- Never immerse or put IQOS ORIGINALS ONE™ or its accessories in contact with water and/or other liquids. Do not touch IQOS ORIGINALS ONE™ and/or its accessories if they become wet or immersed in any liquid.
- Never dispose of IQOS ORIGINALS ONE™ and/or its accessories with other household waste, as it may come into contact with water and/or other liquids.
- . Do not clean the device with any cleaning agent.
- . Clean the USB charging port on the IQOS ORIGINALS ONE™ periodically to avoid accumulation of foreign matters (such as dust particles), and inspect USB port for foreign materials before using USB connector.
- Disconnect IQOS ORIGINALS ONE™ and/or its accessories from any source of power if it overheats, fumes, ignites, or burns while charging.
- Do not touch IQOS ORIGINALS ONE™ and/or its accessories if they do overheat, fume, ignite, or burn.
- . Close cap of the device after use to avoid accumulation of foreign materials (such as dust particles) in the heating chamber, and inspect the heating chamber for foreign materials before using HEETS™ tobacco sticks.

- . Handle with care. Do not drop IQOS ORIGINALS ONE™ or subject it to strong shock.
- . Do not attempt to open, service, modify, or repair any component of IQOS ORIGINALS ONE™ or to replace any of the components or batteries.
- Only use IQOS ORIGINALS ONE™ in ambient temperatures between 0° and 40° C.

Battery Risks

IQOS ORIGINALS ONE™ is powered with sealed Lithium-ion (Li-on) batteries. Under normal conditions of use, the battery is sealed.

- If fluid from leaked battery is swallowed, seek medical attention immediately. Do not
 induce vomiting or ingest food or drink.
- If vapor from leaked battery liquid is inhaled, get fresh air and seek medical attention.
- If fluid from leaked battery is in contact with skin, wash hands and do not touch eyes.
- If fluid from leaked battery is in contact with eyes, immediately flush with running water for at least 15 minutes and seek medical attention immediately.

▲ CAUTION Thermal Burn Risk

Failure to follow these Safety Warnings and Instructions could result in thermal burns

- Store IQOS ORIGINALS ONE™ and HEETS™ in a clean, dry, cool place.
- Do not expose IQOS ORIGINALS ONE™ and HEETS™ to high humidity conditions or direct
- Do not use HEETS™ that have been exposed to excessive heat or moisture.
- Do not remove a HEETS™ while in use
- Never attempt to touch the IOOS ORIGINALS ONE™ heating blade.

▲ CAUTION Allergic Reaction Risk

- Using IQOS ORIGINALS ONE™ and HEETS™ could cause an allergic reaction, such as swelling of the face, lips, tongue, gums, throat, or body, difficulty breathing, or wheezing.
- Stop using IQOS ORIGINALS ONE™ and HEETS™ and seek medical attention immediately if you experience any of the symptoms listed above as they may indicate a serious allergic reaction.

EXCLUSIVE USE OF HEETS™

- Only purchase IQOS ORIGINALS ONE™ and HEETS™ from your local or online IQOS™ stores
 or other authorized retailers.
- Only use IQOS ORIGINALS ONE™ with HEETS™. Never use IQOS ORIGINALS ONE™ with a cigarette or similar products that are not approved for usage with IQOS ORIGINALS ONE™. Doing as may result in join v.
- Do not modify HEETS™ in any way or add any substance to HEETS™. Doing so may result
 in injury.
- HEETS are one-use only and they shall never be reused, lit up with a lighter or a match, or any other fire source.

Reporting of adverse events or incidents

- If you experience any unwanted health effect when using IQOS ORIGINALS ONE™ and/or HEETS™, consult a health care professional.
- You can report any adverse experience or incident directly by contacting your local Call
 Centre (details can be found in the Customer Care & Warranty booklet). By reporting
 adverse experiences or incidents, you can help provide more information on the safety
 of this product.
- For more information please go to www.igos.com.

TECHNICAL DATA

Device:

IQOS ORIGINALS ONE™ Model M0011 Battery type: Li-ion rechargeable battery

Input: 5 V 2 A

The IQOS ORIGINALS ONE™ is marked with the symbol ⊅ the followed by "Sxxxxx" which indicates the IQOS ORIGINALS ONE™ can only be charged using one of the approved Power Adaptor models listed below:

Power Adaptor:

Model: S00120, S00121, S00125, S00122, S00123, S00126

Input: 100 V-240 V~ 50-60 Hz 0.3 A

Output: 5.0 V 2.0 A

Output power: 10.0 W

Average active efficiency: 79.0 %

No load power consumption: <0.09 W

Use with Charging Cable Type C

INFORMATION FOR DISPOSING OF IQOS ORIGINALS ONE™



This symbol on the product or on its packaging indicates that this product and its
individual parts (including batteries) must not be disposed of with your other
household waste. Instead, it is your responsibility to dispose of your waste equipment
 by bringing it to a designated collection point for the recycling of waste of electrical

and electronic equipment. Waste batteries can be returned free of charge at the point of sale. The separate collection and recycling of your waste equipment (including batteries) at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. Disposing of waste equipment as unsorted municipal waste (e.g. by waste incineration or land filling) can have negative effects

BATTERY REMOVAL INSTRUCTIONS (FOR DISPOSAL AND RECYCLING)

Batteries must not be removed by the consumer. At end of product life, only an authorized recycler may safely remove batteries by following the steps below.

'QOS ORIGINALS ONE™ Pocket Charger (A1505):

Step 1: The device should be fully discharged before disassembling it. Remove the cover, then remove the screw on both sides

Step 2: Detach the charger from the hull.

Step 3: Unscrew to remove the retainer.

Step 4: Detach all FPC and connector to remove the charger PCB.

Step 5: Remove battery and dispose according to local regulations.

QOS ORIGINALS ONE™ Holder (A1406,

Step 1: The device should be fully discharged before disassembling it. Remove the front housing from the holder.

Step 2: Remove the rear housing.

Step 3: Remove the power button from the holder.

Step 4: Remove the glue and solder to detach the battery from the middle part and frame. Middle part must cut open due to glue.

Step 5: Remove battery and dispose of according to local regulations.

Confirmation of Compliance

Hereby, Philip Morris Products S.A. declores that IQOS ORIGINALS ONE™ is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The official Declaration of Conformity may be found at: www.pmi.com/declarationofconformity

IQOS ORIGINALS ONE™ Model M0011 operates within the 2.402 – 2.480 GHz frequency band with a maximum RF output power below 10.0 dBm.

Designed and manufactured under the authority of Philip Morris Products S.A., Quai Jeanrenaud 3. 2000 Neuchâtel. Switzerland.

